

WRAITH™



BROADHEAD SYSTEM

BLADE REPLACEMENT

The Wraith™ Universal ferrule is designed to accept all blades offered in the Wraith line. This allows the reuse of undamaged ferrules and the purchase of replacement blades as needed.

CAUTION: Each Wraith blade style slightly changes the overall weight of the broadhead.

1. Hold ferrule thread side down on a solid, non-slick surface. Place the replacement blade, leading edge down, into the containment collar.
2. While slightly pushing down on the collar, rotate the blade upward and into position allowing the collar to hold the blade into position. Repeat this process until all blades are replaced.
3. To remove blades simply reverse instructions.

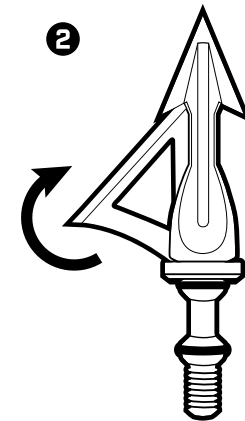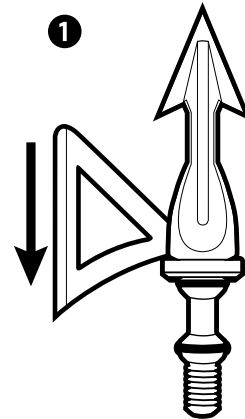

WARNING: Blades are extremely sharp.

BLOODSPORT™

955 Live Oak Street
Tarpon Springs, FL 34689

BLOODSPORTARCHERY.COM